


How to change the input source?


There are two kinds of methods for changing the input source.

ONE-> via keyboard:

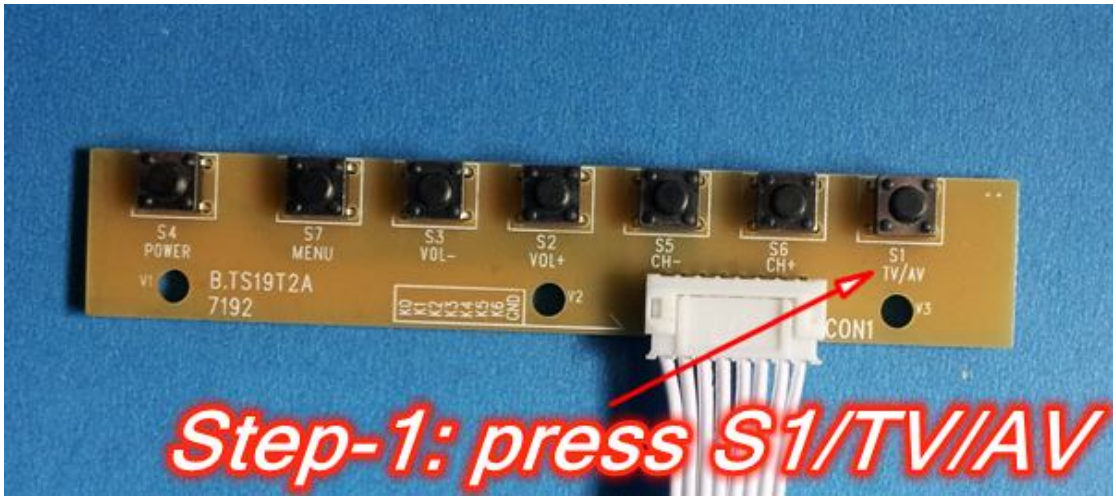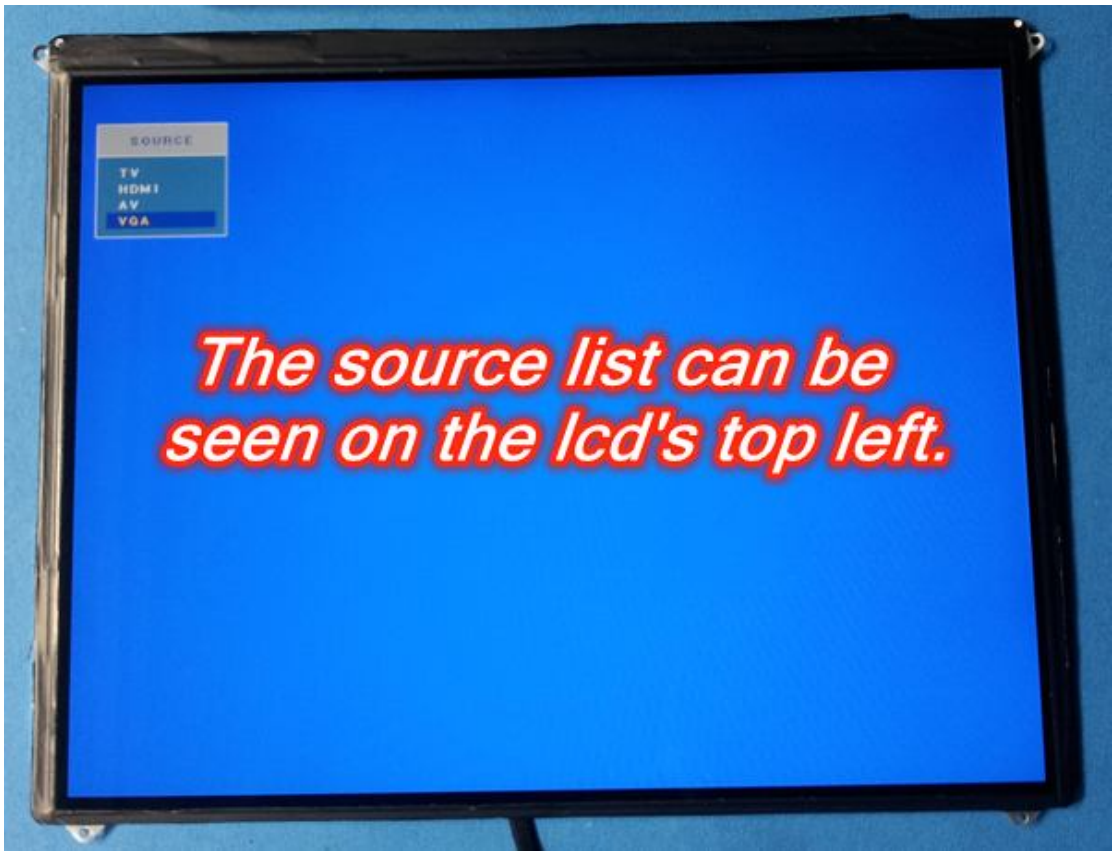


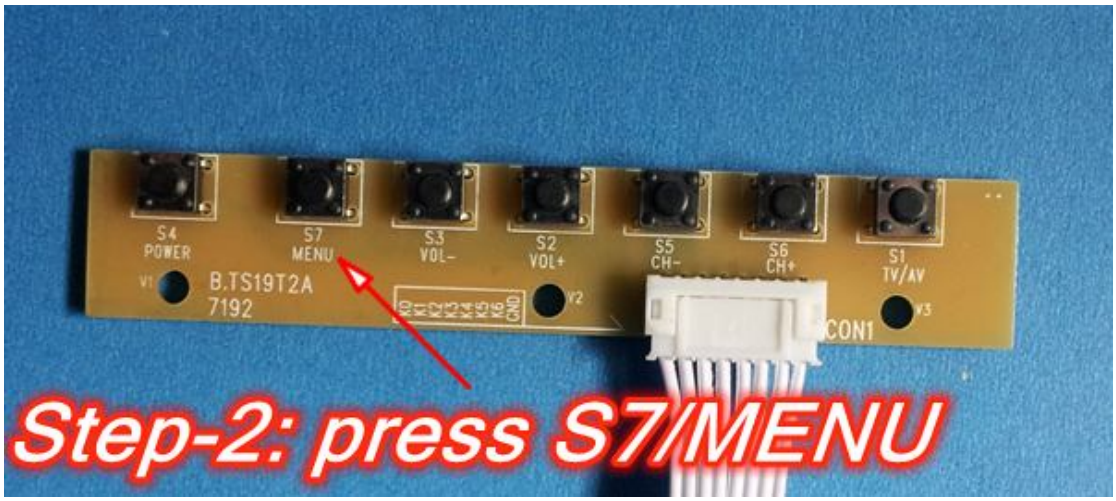



S4
POWER
S7
MENU
S3
VOL-
S2
VOL+
S5
CH-
S6
CH+
S1
TV/AV
B.TS19T2A
7192
CON1
Step-2: press S7/MENU

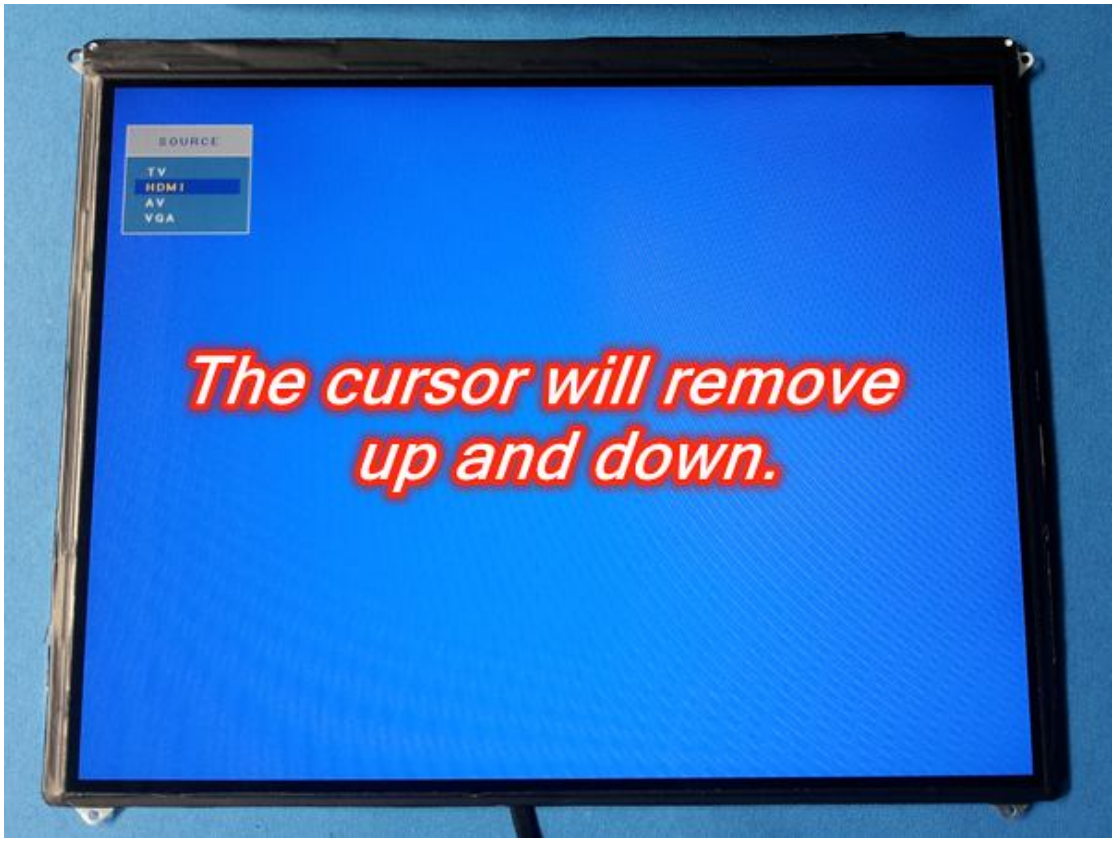
SOURCE
TV
HDMI
AV
VGA
The cursor will remove
up and down.


S4
POWER
S7
MENU
S3
VOL-
S2
VOL+
S5
CH-
S6
CH+
S1
TV/AV
B.TS19T2A
7192
CON1
Step-3: press S2/VOL+

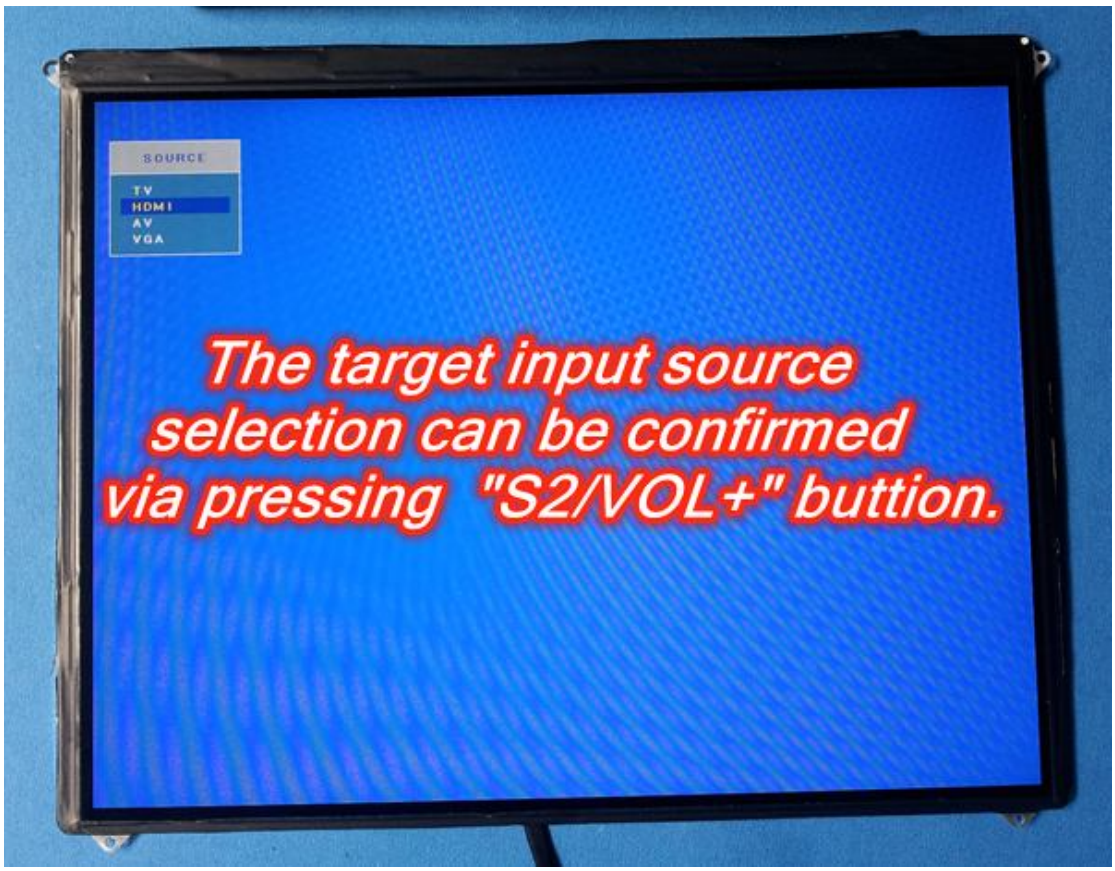
SOURCE
TV
HDMI
AV
VGA
The target input source
selection can be confirmed
via pressing "S2/VOL+" buttion.

TWO-> via Remote Controller:

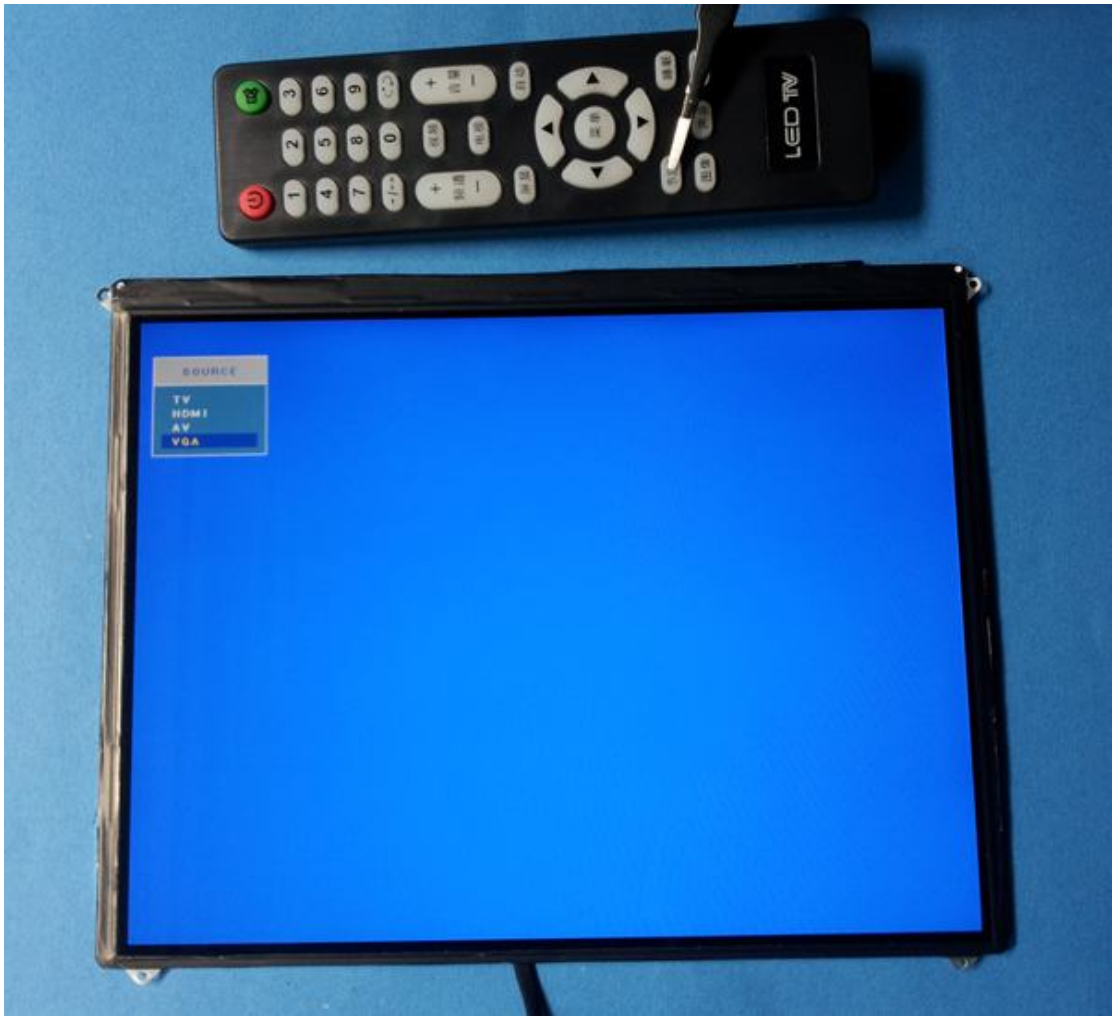


LED TV
SOURCE
TV
HDMI
AV
VGA
The cursor will remove up and down.


LED TV
SOURCE
TV
HDMI
AV
VGA
The target input source selection can be confirmed via pressing "VOL+" buttion.